


Dräger X-plore® 5500 Twinfilter Full Face Masks



Preparation and filter attachment



1 Attach the bayonet cartridges on the mask body.

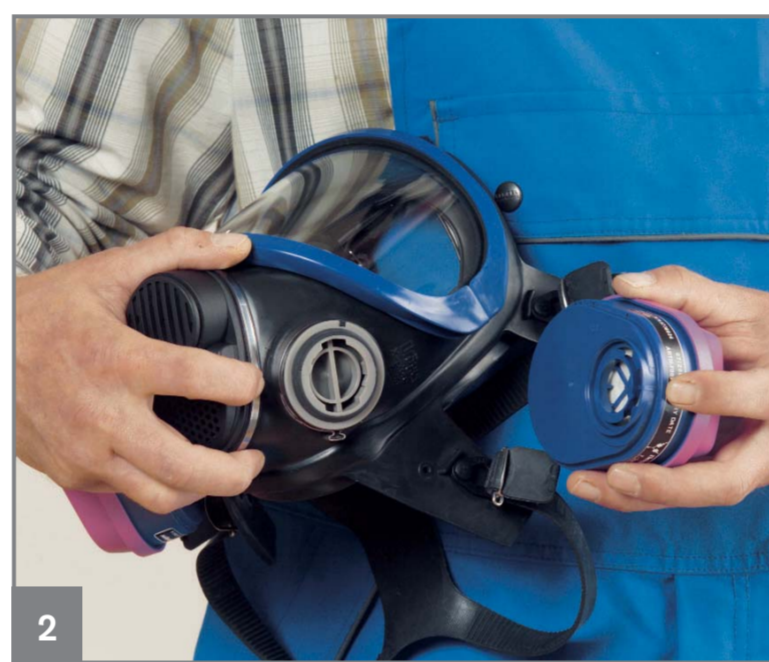

2 Use markings on the mask body and filter to help align the filter.

Donning the mask



3 Open straps as far as possible. Direct the mask towards the face.



4 First insert chin in chinpiece of mask.



5 Fit harness over the head until the mask is in position.



6 Tighten straps until the mask fits snug and secure. First tighten both neck straps, then both temple straps and tighten front strap if necessary.

Performing seal checks: before every use!



7 Negative pressure test: Seal both respiratory filters with your hands and breathe in until a negative pressure (suction) is generated. Hold your breath for a moment. The negative pressure should be maintained. If not, readjust the face piece and adjust the straps. Repeat test until a successful fit check is met.



8 Positive pressure test: Seal off the protective cap of the exhalation valve with your palm and exhale. The mask will inflate slightly. If the mask does not inflate slightly, readjust the face piece and adjust headstraps or use a different mask size. Repeat the test until a successful fit check is met.

Warning: Beards in the sealing area of the mask can cause leaks. Always make sure the mask forms a tight seal and the filter is attached prior to entering a hazardous atmosphere. This poster is not a replacement for reading and understanding the instructions for use for the subject mask and respective filter cartridge, both of which must be read before using either item! Failure to do so could result in sickness or death! For further assistance concerning proper use, ask your supervisor or call your local Dräger organization at +1 800 922 5518.